

TRIMMODE system variable

1888 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1262

Function Description:

The **TRIMMODE** system variable is used to control whether to trim selected edges for fillet and chamfer.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not trim selected edges

1 : trim the selected edge to endpoints of chamfer lines and fillet arcs

Online URL: <https://www.gstarcad.com.my/knowledge/article/trimmode-system-variable-1888.html>