

TSPACETYPE system variable

1890 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 917

Function Description:

The **TSPACETYPE** system variable is used to control the used line space type for Mtext.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 1,2

Adjust line space by at least the tallest characters in a line. Use accurate specified line space, regardless single character size.

System Variable Value:

1 :at least

2 : accurate

Online URL: <https://www.gstarcad.com.my/knowledge/article/tspacetype-system-variable-1890.html>