

## **TSPACETYPE system variable**

1890 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 916

### **Function Description:**

The **TSPACETYPE** system variable is used to control the used line space type for Mtext.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 1,2

Adjust line space by at least the tallest characters in a line. Use accurate specified line space, regardless single character size.

### **System Variable Value:**

**1** :at least

**2** : accurate

Online URL: <https://www.gstarcad.com.my/knowledge/article/tspacetype-system-variable-1890.html>