

## **TSTACKALIGN system variable**

1891 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 930

### **Function Description:**

The **TSTACKALIGN** system variable is used to control the vertical alignment for stacked text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1,2

### **System Variable Value:**

**0** : bottom aligned

**1** : center aligned

**2** : top aligned

Online URL: <https://www.gstarcad.com.my/knowledge/article/tstackalign-system-variable-1891.html>