

TSTACKALIGN system variable

1891 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 937

Function Description:

The **TSTACKALIGN** system variable is used to control the vertical alignment for stacked text.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1,2

System Variable Value:

0 : bottom aligned

1 : center aligned

2 : top aligned

Online URL: <https://www.gstarcad.com.my/knowledge/article/tstackalign-system-variable-1891.html>