

TSTACKSIZE system variabl

1892 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 673

Function Description:

The **TSTACKSIZE** system variable is used to control the height of fraction of stack text relative to the current height percentage of selected text.

Type : Integer

Saved in : Drawing

Initial value : 70

Range : 25 ~ 125

Online URL: <https://www.gstarcad.com.my/knowledge/article/tstacksize-system-variabl-1892.html>