

## **TSTACKSIZE system variabl**

1892 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 670

### **Function Description:**

The **TSTACKSIZE** system variable is used to control the height of fraction of stack text relative to the current height percentage of selected text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 70

**Range** : 25 ~ 125

Online URL: <https://www.gstarcad.com.my/knowledge/article/tstacksize-system-variabl-1892.html>