

## UCSAXISANG system variable

1893 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 904

### Function Description:

The **UCSAXISANG** system variable is used to store the default angle when rotating the UCS around one of its axis by using the X, Y, or Z options of USC command.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 90

**Range** : 5,10,15,18,22.5,30,45,90,180

The value of **UCSAXISANG** system variable must be entered as an angle in degrees.

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsaxisang-system-variable-1893.html>