

UCSBASE system variable

1894 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 787

Function Description:

The **UCSBASE** system variable is used to store the the name of **UCS** that defined the original point and direction for ortho **UCS** settings.

Type : Strings

Saved in : Drawing

Initial value : ""

The valid value could be any named **UCS**.

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsbase-system-variable-1894.html>