

## UCSBASE system variable

1894 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 792

### Function Description:

The **UCSBASE** system variable is used to store the the name of **UCS** that defined the original point and direction for ortho **UCS** settings.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

The valid value could be any named **UCS**.

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsbase-system-variable-1894.html>