

## UCSFOLLOW system variable

1895 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 926

### Function Description:

The **UCSFOLLOW** system variable is used to generate plan view when changing from one UCS to another UCS.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

The **UCSFOLLOW** system variable is used to generate plan view when changing from one UCS to another UCS.

### System Variable Value:

**0** : do not affect current view when changing UCS

**1** : generate new UCS plan view in current viewport when changing UCS

**Note:** the **USCFOLLOW** settings will be ignored in paper space.

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsfollow-system-variable-1895.html>