

## UCSORG system variable

1898 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 924

### Function Description:

The **UCSORG** system variable is used to store the current users coordinate original point in current viewport of current space.

(Read-Only)

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000,0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsorg-system-variable-1898.html>