

## **UCSVIEW system variable**

1899 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1052

### **Function Description:**

The **UCSVIEW** system variable is used to determine whether the current UCS stored with named view.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : do not store current UCS together with named view

**1** : store current UCS together with named view once it created

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsview-system-variable-1899.html>