

UCSVIEW system variable

1899 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1044

Function Description:

The **UCSVIEW** system variable is used to determine whether the current UCS stored with named view.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not store current UCS together with named view

1 : store current UCS together with named view once it created

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsview-system-variable-1899.html>