

UCSVP system variable

1900 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 851

Function Description:

The **UCSVP** system variable is used to determine whether the UCS in other viewport is dependent or independent of UCS in current viewport.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : unlocked; the UCS reflects the current UCS of current viewport

1 : lock; the UCS stores in viewport and independent of the UCS of the current viewport

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsvp-system-variable-1900.html>