

## UCSXDIR system variable

1901 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 679

### Function Description:

The **UCSXDIR** system variable is used to store the X direction of current UCS in current viewport of current space.

(Read-Only)

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : 0.0000,1.0000,0.0000

The X direction of **UCS** could be different for each viewport.

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsxdir-system-variable-1901.html>