

UCSYDIR system variable

1902 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 704

Function Description:

The **UCSYDIR** system variable is used to store the Y direction of current UCS in current viewport of current space.

(Read-Only)

Type : 3D point

Saved in : Drawing

Initial value : 0.0000,1.0000,0.0000

The Y direction of UCS could be different for each viewport.

Online URL: <https://www.gstarcad.com.my/knowledge/article/ucsydir-system-variable-1902.html>