

UNDOMARKS system variable

1904 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 955

Function Description:

The **UNDOMARKS** system variable is used to display the mark number placed in UNDO control stream.

(Read-Only)

Type : Integer

Saved in :Not saved

Initial value : 0

If one group is currently active, the Mark and Back options are disabled.

Online URL: <https://www.gstarcad.com.my/knowledge/article/undomarks-system-variable-1904.html>