

UNITMODE system variable

1905 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 944

Function Description:

The **UNITMODE** system variable is used to display format of units.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : display fractional, feet-inches, and surveyor' angle according to Report format separated by spaces

1 : display fractional, feet-inches, and surveyor' angle according to Input format without including spaces, but substituting dashes for spaces in some cases.

Online URL: <https://www.gstarcad.com.my/knowledge/article/unitmode-system-variable-1905.html>