

## **VIEWCTR system variable**

1906 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 672

### **Function Description:**

The **VIEWCTR** system variable is used to store the center of view in current viewport.  
(Read-Only)

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : Unknown

It is expressed by **UCS** coordinates.

Online URL: <https://www.gstarcad.com.my/knowledge/article/viewctr-system-variable-1906.html>