

VIEWCTR system variable

1906 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 668

Function Description:

The **VIEWCTR** system variable is used to store the center of view in current viewport.
(Read-Only)

Type : 3D point

Saved in : Drawing

Initial value : Unknown

It is expressed by **UCS** coordinates.

Online URL: <https://www.gstarcad.com.my/knowledge/article/viewctr-system-variable-1906.html>