

## **VIEWDIR system variable**

1907 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 805

### **Function Description:**

The **VIEWDIR** system variable is used to store the view direction by UCS coordinates in current viewport.

(Read-Only)

**Type** : 3D vector

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000,1.0000

It describes the camera point as the 3D offset value of target point.

Online URL: <https://www.gstarcad.com.my/knowledge/article/viewdir-system-variable-1907.html>