

# VIEWMODE system variable

1908 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 967

## Function Description:

The **VIEWMODE** system variable is used to store view settings of current viewport.  
(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2,4,8,16

## System Variable Value:

**0** : turn off

**1** : perspective view active

**2** : turn clipping front on

**4** : turn clipping back on

**8** : turn on UCS follow mode

**16** : front clipping is not at eye. If this system variable is on, the front clip distance ( FRONTZ) determines the front clipping plane. If this system variable is off, FRONTZ is ignored, and the front clipping plane is set to pass through the camera point (vectors behind the camera are not displayed). This flag is ignored if the front-clipping bit (2) is off.

Online URL: <https://www.gstarcad.com.my/knowledge/article/viewmode-system-variable-1908.html>