

VIEWSIZE system variable

1909 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1034

Function Description:

The **VIEWSIZE** system variable is used to store the view height (measured by drawing unit) displayed in current viewport.

(Read-Only)

Type : Real

Saved in : Drawing

Initial : value Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/viewsize-system-variable-1909.html>