

## **VSMAX system variable**

1913 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 620

### **Function Description:**

The **VSMAX** system variable is used to store the top-right on the virtual screen of current viewport.  
(Read-Only)

**Type :** 3D point

**Saved in :** Drawing

**Initial value :** Unknown

This value is expressed by UCS coordinates.

Online URL: <https://www.gstarcad.com.my/knowledge/article/vsmax-system-variable-1913.html>