

VSMAX system variable

1913 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 609

Function Description:

The **VSMAX** system variable is used to store the top-right on the virtual screen of current viewport.
(Read-Only)

Type : 3D point

Saved in : Drawing

Initial value : Unknown

This value is expressed by UCS coordinates.

Online URL: <https://www.gstarcad.com.my/knowledge/article/vsmax-system-variable-1913.html>