

VSMIN system variable

1914 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 863

Function Description:

The **VSMIN** system variable is used to store the bottom-left on the virtual screen of current viewport.
(Read-Only)

Type : 3D point

Saved in : Drawing

Initial value : Unknown

This value is expressed by UCS coordinates.

Online URL: <https://www.gstarcad.com.my/knowledge/article/vsmin-system-variable-1914.html>