

## **VSSTATE system variable**

1915 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1049

### **Function Description:**

The **VSSTATE** system variable is used to indicate whether the Visual Style window is open or closed.  
(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

Online URL: <https://www.gstarcad.com.my/knowledge/article/vsstate-system-variable-1915.html>