

VSSTATE system variable

1915 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1038

Function Description:

The **VSSTATE** system variable is used to indicate whether the Visual Style window is open or closed.
(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 0

Online URL: <https://www.gstarcad.com.my/knowledge/article/vsstate-system-variable-1915.html>