

WINDOWAREACOLOR system variable

1916 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 733

Function Description:

The **WINDOWAREACOLOR** system variable is used to control the color of transparency selection area when window selecting.

Type : Integer

Saved in : Registry

Initial value : 150

Range : 1 ~ 255

The **SELECTIONAREA** system variable should be turned on to display colors.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/windowareacolor-system-variable-1916.html>