

## **WINDOWAREACOLOR system variable**

1916 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 721

### **Function Description:**

The **WINDOWAREACOLOR** system variable is used to control the color of transparency selection area when window selecting.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 150

**Range** : 1 ~ 255

The **SELECTIONAREA** system variable should be turned on to display colors.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/windowareacolor-system-variable-1916.html>