

## **WMFBKGND system variable**

1917 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 601

### **Function Description:**

The **WMFBKGND** system variable is used to control the display of background when inserting an object as WMF format.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : off

Users could use one of the following way to insert objects:

Export WMF file by WMFOUT command

Copy to clipboard and paste as WMF files

Drag as WMF files

Online URL: <https://www.gstarcad.com.my/knowledge/article/wmfbkgnd-system-variable-1917.html>