

WMFBKGND system variable

1917 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 597

Function Description:

The **WMFBKGND** system variable is used to control the display of background when inserting an object as WMF format.

Type : Integer

Saved in : Not saved

Initial value : off

Users could use one of the following way to insert objects:

Export WMF file by WMFOUT command

Copy to clipboard and paste as WMF files

Drag as WMF files

Online URL: <https://www.gstarcad.com.my/knowledge/article/wmfbkgnd-system-variable-1917.html>