

## **WMFFOREGND system variable**

1918 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 774

### **Function Description:**

The **WMFFOREGND** system variable is used to specify the foreground color when inserting an object as WMF format.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : off

Users could use one of the following way to insert objects: Export **WMF** file by **WMFOUT** command  
Copy to clipboard and paste as **WMF** files

Drag as **WMF** files

The **WMFFOREGND** will be applied when **WMFBKGND** system variable is turned off.

### **System Variable Value:**

**Off** : if necessary, exchange foreground color and background color to make sure that the foreground is darker than background color

**On** : if necessary, exchange foreground color and background color to make sure that the foreground is brighter than background color

Online URL: <https://www.gstarcad.com.my/knowledge/article/wmfforegnd-system-variable-1918.html>