

WORLDUCS system variable

1919 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1058

Function Description:

The **WORLDUCS** system variable is used to specify whether the UCS coincident with the WCS.
(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 :the UCS is different from WCS

1 : the UCS is the same as WCS

Online URL: <https://www.gstarcad.com.my/knowledge/article/worlducs-system-variable-1919.html>