

## **WORLDUCS system variable**

1919 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1044

### **Function Description:**

The **WORLDUCS** system variable is used to specify whether the UCS coincident with the WCS.  
(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** :the UCS is different from WCS

**1** : the UCS is the same as WCS

Online URL: <https://www.gstarcad.com.my/knowledge/article/worlducs-system-variable-1919.html>