

WORLDVIEW system variables

1920 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 848

Function Description:

The **WORLDVIEW** system variable is used to determine whether it is relative to WCS (by default) or current UCS when entering under DVIEW and VPOINT commands.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : UCS remains unchanged

1 : UCS switches to WCS when executing commands; relative to current UCS when entering commands

Online URL: <https://www.gstarcad.com.my/knowledge/article/worldview-system-variables-1920.html>