

## **WORLDVIEW system variables**

1920 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 846

### **Function Description:**

The **WORLDVIEW** system variable is used to determine whether it is relative to WCS (by default) or current UCS when entering under DVIEW and VPOINT commands.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : UCS remains unchanged

**1** : UCS switches to WCS when executing commands; relative to current UCS when entering commands

Online URL: <https://www.gstarcad.com.my/knowledge/article/worldview-system-variables-1920.html>