

WSCURRENT system variable

1922 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1044

Function Description:

The **WSCURRENT** system variable is used to display name of current work space and set specified work space to be current under command prompts.

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/wscurrent-system-variable-1922.html>