

## **XCLIPFRAME system variable**

1923 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 798

### **Function Description:**

The **XCLIPFRAME** system variable is used to determine whether to display or plot the xref clipping boundaries in current drawing.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 2

**Range** : 0,1,2

### **System Variable Value:**

**0** : the frame is invisible and could not plot it

The frame could temporarily redisplay when previewing selection set or duration of selecting objects

**1** : display and plot xref frame for clipping

**2** : display but not plot xref frame for clipping

Online URL: <https://www.gstarcad.com.my/knowledge/article/xclipframe-system-variable-1923.html>