

## **XDWGFADECTL system variable**

1924 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1010

### **Function Description:**

The **XDWGFADECTL** system variable is used to control the fade degree for all DWG xref objects.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 50

**Range** : -90 ~ 90

### **System Variable Value:**

**0** : DWG xref objects do not fade

**>0** : when this value is a positive value, the fade degree is controlled by percentage up to 90%

**<0** : when this value is a negative value, DWG xref objects do not fade, but the value is kept and it could be converted by changing its symbol.

Online URL: <https://www.gstarcad.com.my/knowledge/article/xdwgfadectl-system-variable-1924.html>