

## **XEDIT system variable**

1925 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 979

### **Function Description:**

The **XEDIT** system variable is used to control whether the current drawing could be in-place edited or not when it is referenced by another drawing.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : prevent in-place reference editing

**1** : allow in-place reference editing

Online URL: <https://www.gstarcad.com.my/knowledge/article/xedit-system-variable-1925.html>