

## **XREFNOTIFY system variables**

1931 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 879

Function Description:

The **XREFNOTIFY** system variable is used to control the notification about xref updating or missing.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 2

**Range** : 0,1,2

### **System Variable Value:**

**0** : xref notification disabled

**1** : enable xref notification. Notify users that xref has attached to current drawing by displaying xref icons in tray of toolbar. Warning users when missing xref by display yellow warning symbol(!) on xref icon when opening a drawing.

**2** : enable xref notification and balloon message. It display balloon message in the same area when xref changed. The XNOTIFYTIME system variable control the time interval by seconds for checking and modifying xref.

Online URL: <https://www.gstarcad.com.my/knowledge/article/xrefnotify-system-variables-1931.html>