

XREFTYPE system variable

1932 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 802

Function Description:

The **XREFTYPE** system variable is used to control the default reference type when attaching or overlaying external reference.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : attachment is the default

1 : overlay is the default

Online URL: <https://www.gstarcad.com.my/knowledge/article/xref-type-system-variable-1932.html>