

## 3DMOVE command

1940 GstarCAD MY /KW July 30, 2021 [CAD Commands](#) 0 792

The **3DMOVE** command is used to move 3D model to the specified direction and distance.

### Command Access:

**Ribbon** : 3D > 3D Operations > 3D Move

**Menu** : Modify > 3D Operations> 3D Move

**Command** : 3DMOVE

### Command Prompts:


Select object:

Specify base point or [Displacement] <Displacement>:

Specify second point or <use first point as displacement>:

### Function Description:

Users could move objects and sub objects freely or move constraint to specified axis or plane.

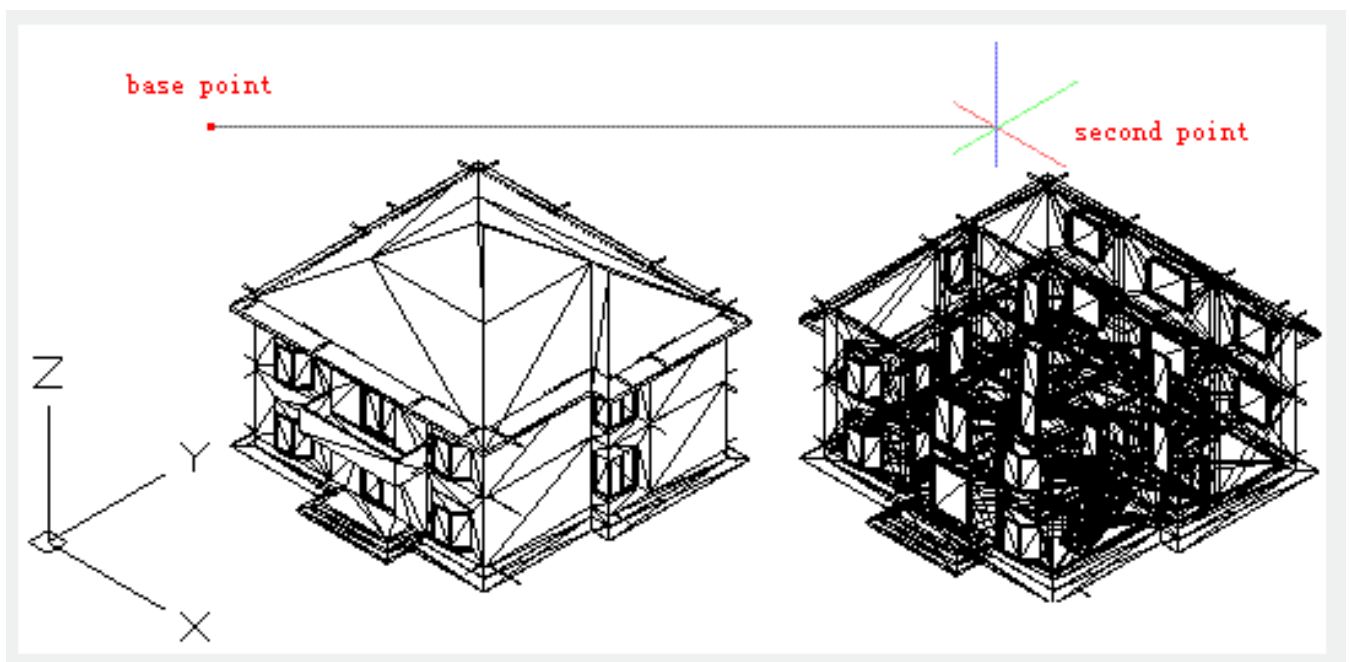

### Relative Glossary:

#### Select object:

Select object to be moved and press ENTER.

#### Base point:

Specify base point of 3D object for moving.

#### Displacement:

Input the coordinate under the command prompt to specify the relative distance and direction of selected

3D object.

**Second point:**

Specify the final position for 3D object. Users could move cross cursor to specify direction or input displacement.

Online URL: <https://www.gstarcad.com.my/knowledge/article/3dmove-command-1940.html>