

# ATTINC command

1979 GstarCAD MY /KW August 3, 2021 [CAD Commands](#) 0 877


The **ATTINC** command helps to specify attribute of blocks with incremental value, and to modify attribute value of blocks according to the sort method.


**Command Access :**

**Command name :** ATTINC

**Function Description :**

This command can increase block attribute value that contains a number or letter. When ATTINC command is on, as long as the drawing is not closed, when copying, inserting and deleting a block attribute in the drawing, the property number or letter can be updated automatically.

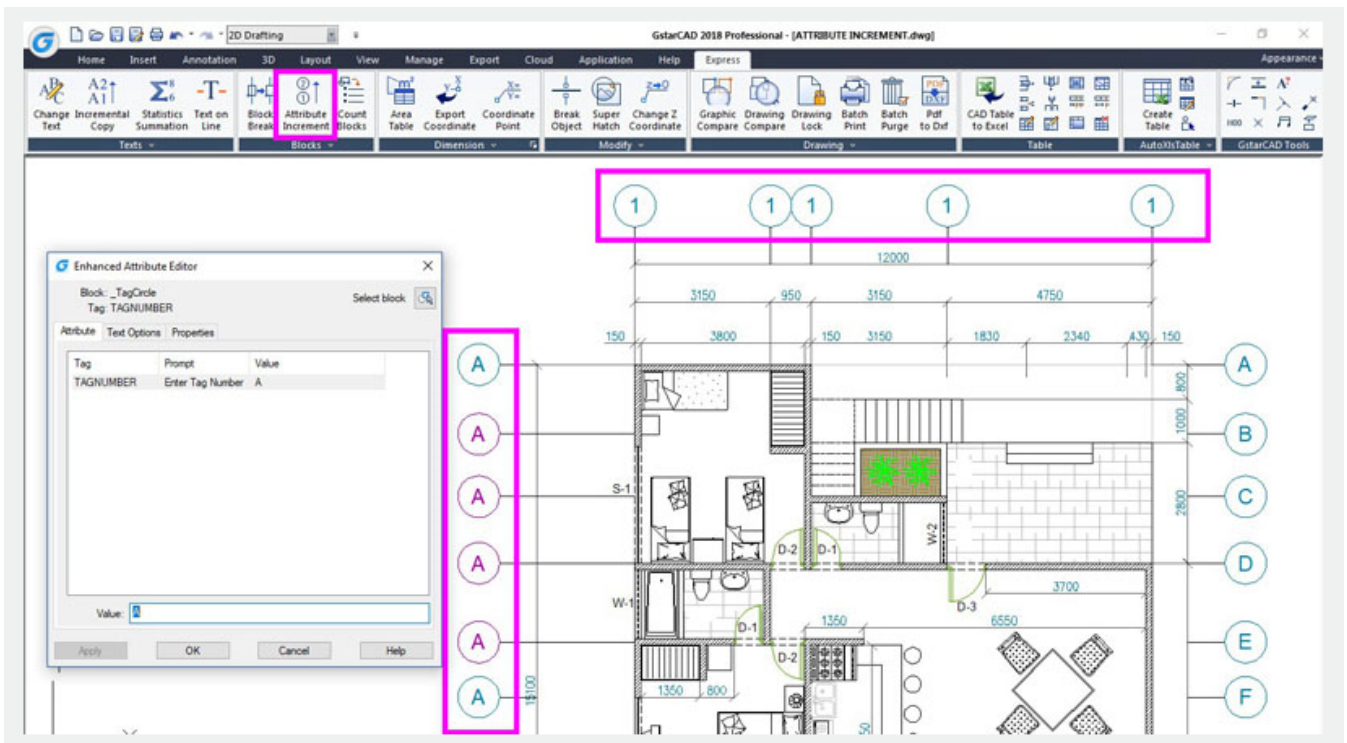

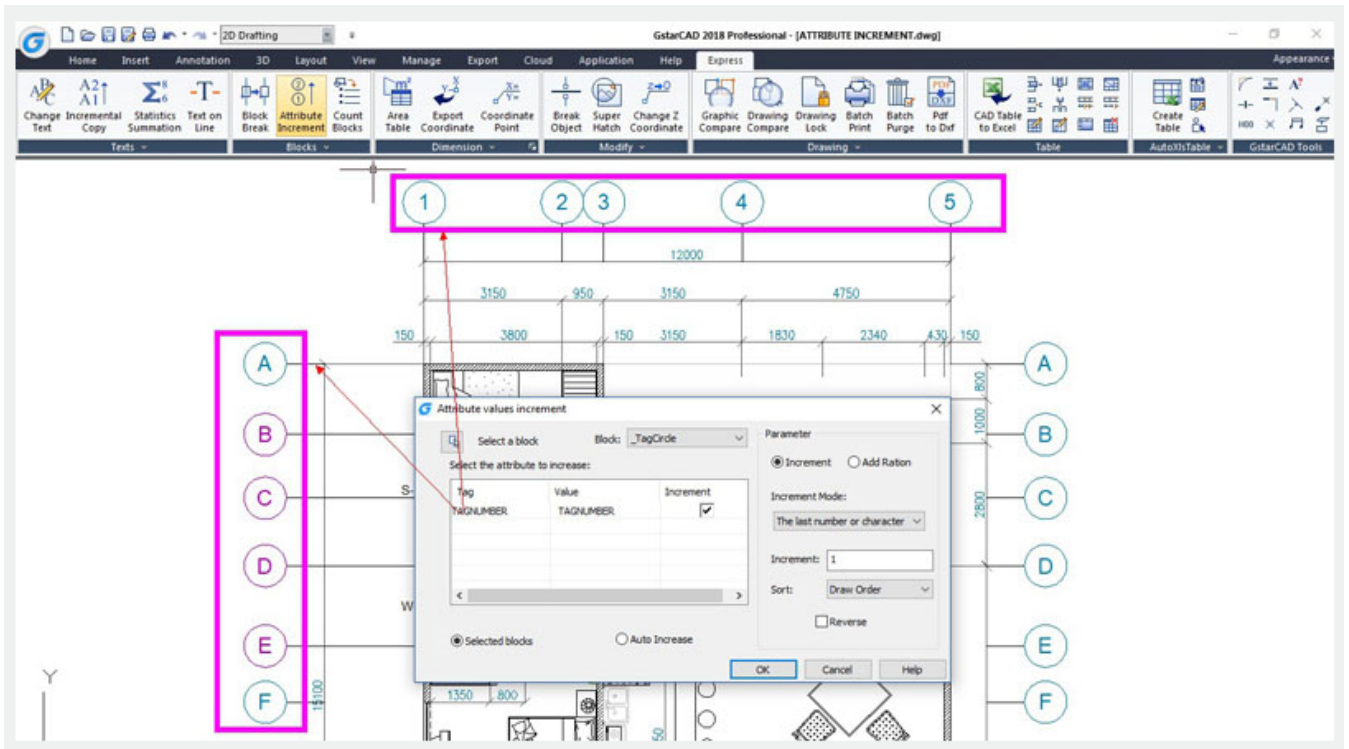

Online URL: <https://www.gstarcad.com.my/knowledge/article/attinc-command-1979.html>