

## **BSAVE command**

2017 GstarCAD MY /KW August 5, 2021 [CAD Commands](#) 0 750

The **BSAVE** command is used to save current block definition.

### **Command Access:**

**Command :** BSAVE

### **Function Description:**

This command could only be used in block editor. It could save all changes of current block definition.

Online URL: <https://www.gstarcad.com.my/knowledge/article/bsave-command-2017.html>