

BSAVE command

2017 GstarCAD MY /KW August 5, 2021 [CAD Commands](#) 0 770

The **BSAVE** command is used to save current block definition.

Command Access:

Command : BSAVE

Function Description:

This command could only be used in block editor. It could save all changes of current block definition.

Online URL: <https://www.gstarcad.com.my/knowledge/article/bsave-command-2017.html>