BURST command

2020 GstarCAD MY /KW August 5, 2021 CAD Commands 0 1222

The BURST command is use to explode blocks, converting value of attributes to text objects.

Command Access:

Command: BURST

Menu: Express>Blocks>Explode Attributes to Text


Command line prompts as follows:

Select entities: Use an object selection method


For example:

Explode attributes and convert them to text objects.

1. Select a block containing two attributes:

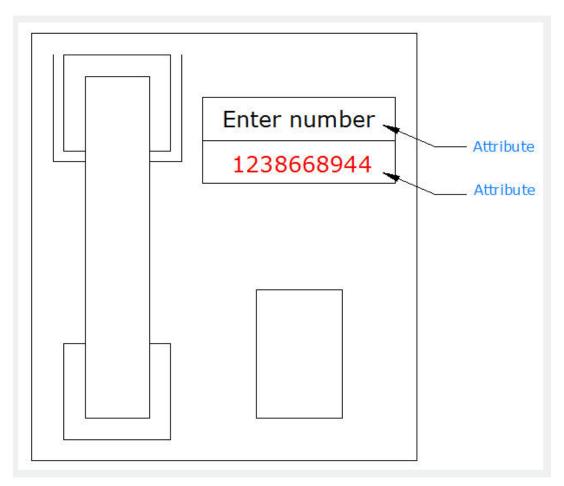

2. Block exploded and attribute values converted to text:

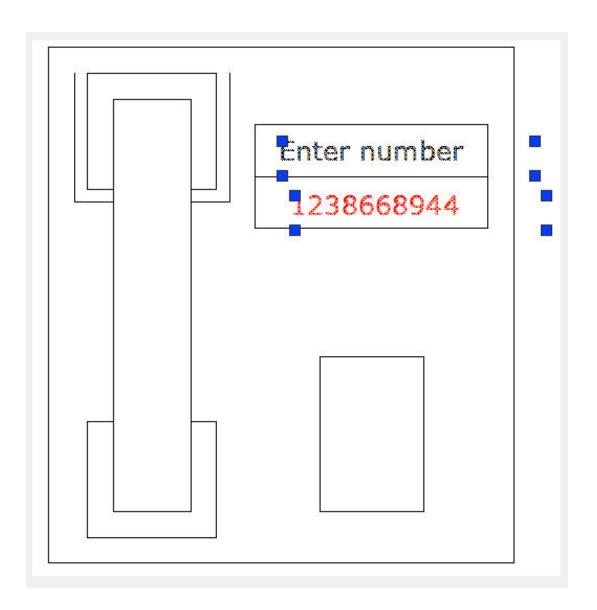

Online URL: https://www.gstarcad.com.my/knowledge/article/burst-command-2020.html