

# BVSTATE command


2023 GstarCAD MY /KW August 5, 2021 [CAD Commands](#) 0 1140

The **BVSTATE** command is used to create, set or remove visibility states from dynamic block.

## Command Access:

**Command :** BVSTATE

## Function Description:

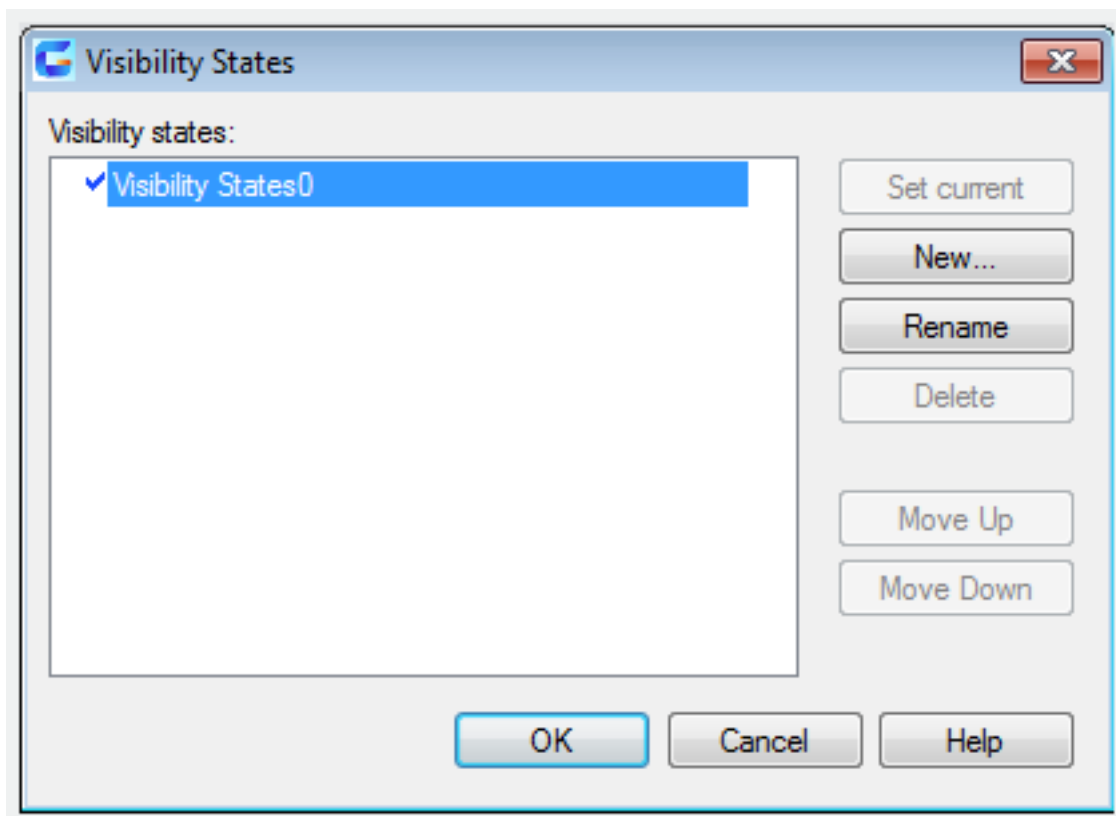

After inserting visibility parameter to block definition, users could edit it in "Visibility States" dialog box.

Online URL: <https://www.gstarcad.com.my/knowledge/article/bvstate-command-2023.html>